


SD1 +

Speech Dialler



Installation Instructions

1. Overview

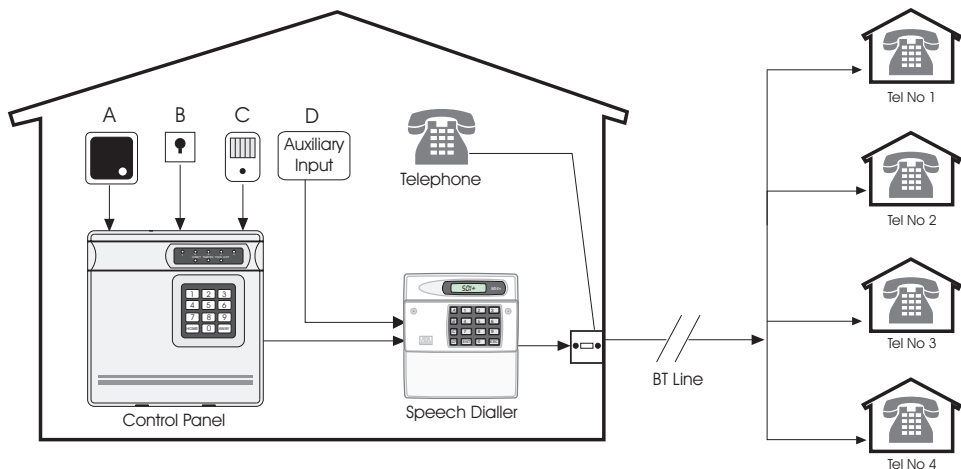

Connections: The SD1+ is connected between the alarm control panel and the telephone line. It behaves like another extension to the telephone and does not affect its normal operation or that of any other extension fitted. The unit requires no batteries as its power and mains fail back-up are derived from the alarm control panel.

The SD1+ accepts three trigger inputs which in our example are; A - Fire, B - Personal Attack (PA), C - Burglary and D - Auxiliary. These inputs correspond to the messages (A, B, C or D) that the SD1+ sends out and should be recorded as such. The SD1+ can also accept a direct connection from suitable auxiliary devices such as radio PA buttons, medical alarms or anything using voltage free contacts.

Telephone Numbers: The SD1+ will dial up to four different telephone numbers and play its message. The numbers may be up to 24 digits long and are simply programmed using the text display and keypad on the unit. The SD1+ also supports pager numbers. Note: The SD1+ must NOT be used to call the Police via the Emergency Services phone numbers.

Messages: The SD1+ has a built-in microphone and speaker so that messages can be recorded and replayed directly from the unit. When the outgoing call is answered the SD1+ plays a common phrase (0) and one of the three alarm messages (phrases A, B or C). Phrase 0 normally states the name and address of the site and phrases A, B and C relate to the inputs from the control panel (Fire, PA, and Burglary in our example). A total of 40 seconds is available for recording messages.

Acknowledgement: On receiving a call from the SD1+ the person answering the call can acknowledge it by pressing number [8] on their telephone. If the message is not acknowledged then it is repeated four times after which the SD1+ abandons the call. The SD1+ has several acknowledgement options which allows the unit to stop dialling after the first call has been acknowledged or when two or three have been acknowledged.

Abort: The SD1+ has several abort options which include applying a signal to the abort input, restoring the trigger input or by entering the operators passcode. When the unit is aborted it immediately shuts down and returns to its normal standby mode.

2. Installation Requirements


The SD1+ has been designed to be connected to an intruder alarm control panel or similar. The control panel must have an auxiliary power output of between 11.5V and 14V, and the ability to provide a minimum of 100mA.

The unit is supplied with a 2 metre telephone lead which will plug directly into any standard BT socket and it is therefore recommended that the unit is sited as near to a BT telephone socket as possible. If this is not possible an approved BT extension lead may be required or the unit can be hard wired to the BT socket (see section 8).

3. Mounting Instructions

1. Separate the cover from the base by using a screwdriver to push two of the retaining clips (top or bottom) inwards from the base indents. Remove cover assembly and store in a safe place.
2. Hold the base in position (keyhole to the top) and mark the three securing holes. Remove the base then drill and plug the holes.
3. Pass all cables into the base through the cable entries and then secure the base to wall.

4. PCB Layout

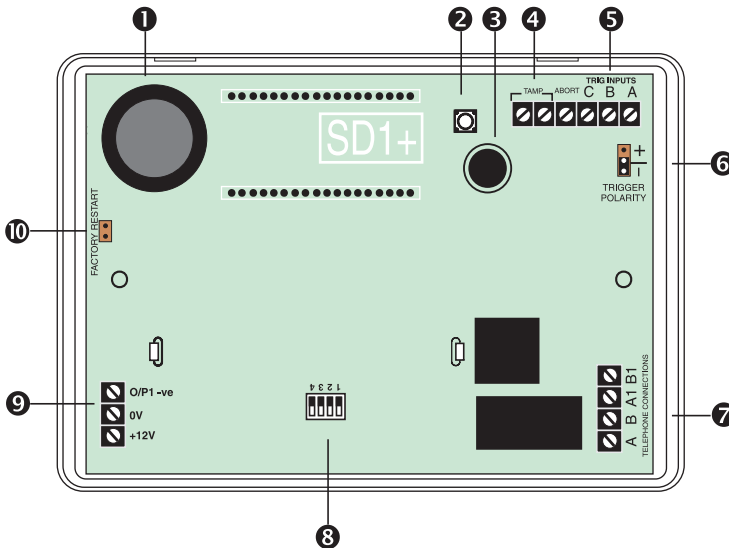

- | | |
|-----------------------------|--|
| 1 Loudspeaker | 6 Trigger Polarity |
| 2 Tamper Switch | 7 Telephone Connections (TNV) |
| 3 Microphone | 8 Country Setting (Not fitted on UK product) |
| 4 Tamper connections (SELV) | 9 12V Supply and Programmable O/P (SELV) |
| 5 Trigger Inputs (SELV) | 10 Factory Restart Pins |

5. SD1 + Connections

Before any connections are made to the SD1 + remove the power (battery and 240V mains) from the control panel. Connections are provided as follows:

TRIG A: When triggered, the unit starts the dialling sequence and sends messageA.

TRIG B: When triggered, the unit starts the dialling sequence and sends messageB.

TRIG C: When triggered, the unit starts the dialling sequence and sends messageC.

ABORT / D: If the SD1 + is programmed as "ABORT by INPUT" this connection can be used to abort the dialling sequence. If the SD1 + is not programmed as "ABORT by INPUT" this connection can be used as trigger input D.


Trigger/Abort inputs can be selected to be either +ve applied to trigger or -ve applied to trigger. Set the "Trigger Polarity" jumper-link to the appropriate position.

TAMP: These two terminals can be connected to the main tamper zone on the alarm control panel, to provide case tamper protection for the SD1 +.


0V: Connect to a permanent 0V supply on the control panel.

+12V: Connect to a permanent +12V supply on the control panel.

O/P1: A switched -ve @100mA programmable output.

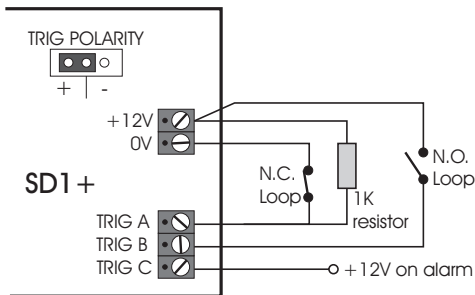

TRIG A = Normally Closed Input
 TRIG B = Normally Open Input
 TRIG C = Switched +ve Input

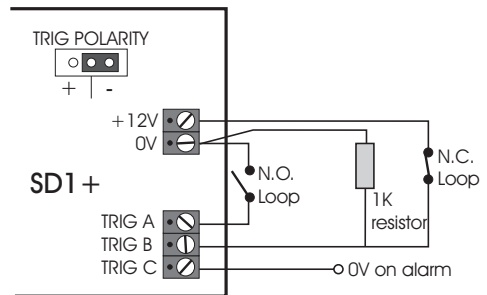

TRIG A = Normally Open Input
 TRIG B = Normally Closed Input
 TRIG C = Switched -ve Input

- ⚠ Connections on the SD1+ are described as either "Safety Extra-Low Voltage" circuits (SELV) or "Telecommunication Network Voltages" circuits (TNV). Therefore it is important that installer ensures that TNV circuits are only connected to the PSTN and SELV circuits are only connected to other circuits designated as SELV circuits.
- ⚠ Please ensure that cabling to the telephone line connections (TNV) are routed well away from the trigger input circuitry (SELV) and the cabling to the trigger input circuitry (SELV) are routed well away from the telephone circuitry (TNV).

6. Control Panel Connections

The table below shows the connection details to various control panels.

Control Panel	TRIG A	TRIG B Fire	TRIG C PA	Polarity Alarm	Supply+	Supply-	Trigger Type
Menvier TS400/TS410	Zone 4	Zone 5	ALM	-	Aux +	Aux -	0V app.
Menvier TS510	N/A	OP 2 *	OP 1 *	+	Aux +	Aux -	12V app.
Menvier TS690R	OP 1	OP 2	OP 3	-	Aux +	Aux -	0V app.
Menvier TS690/TS700	Digi 1	Digi 2	Digi 3	-	Aux +	Aux -	0V app.
Menvier TS790/TS900/TS2500	Digi 1	Digi 2	Digi 3	-	Aux+	Aux -	0V app.
A1 Advantage	N/A	N/A	Bell -	-	Aux +	Aux -	0V app.
ADE Optima XM	N/A	N/A	B	-	13V +	13V -	0V app.
ADE Optima 2+	Fire	PA	Intruder	-	13V +	13V -	0V app.
ADE Concept 6	N/A	N/A	B	-	13V +	13V -	0V app.
ADE Accenta 6	N/A	N/A	B	-	13V +	13V -	0V app.
Ademco Infra 6	N/A	N/A	3	+	Aux +	Aux -	12V app.
Ademco Infra 16	1 *	2	3	+	Aux +	Aux -	12V app.
C & K 700L	N/A	N/A	S-	-	Aux +	Aux -	0V app.
CQR Premia 9	FA *	PA	IA	+	Aux 12V	Aux 0V	12V app.
DA Abacus 6	N/A	N/A	Bell	-	+12V	0V	0V app.
DA Abacus 8	N/A	N/A	Bell	-	+12V	0V	0V app.
Gardtec 500 Series	N/A	N/A	Bell -	-	Power +	Power -	0V app.
Gardtec 800 Series	D1 *	PA	12Hr	-	12V	0V	0V app.
JSB Regent	COM1	COM2	COM3	+	12V	0V	12V app.
Pyronix Paragon + /E	N/A	N/A	BA	-	Aux +	Aux -	0V app.
Pyronix Octagon	N/A	PA	ALM	-	Aux +	Aux -	0V app.
Pyronix Conqueror	N/A	N/A	BA	-	Aux +	Aux -	0V app.
Scantronic 9448	N/A	COM 2	COM 3	-	12V	0V	5V rem.
Scantronic 9452/3	N/A	COM 1	COM 3	-	Aux 12V	Aux 0V	5V rem.
Scantronic 9454	N/A	COM 1	COM 3	-	12V	0V	5V rem.
Scantronic 9455	N/A	COM 1	COM 3	-	12V	0V	5V rem.
Texecom Veritas R8	N/A	N/A	B	-	Aux +	Aux -	0V app.
Texecom Veritas 8 Compact	N/A	N/A	B	-	Aux +	Aux -	0V app.


* Control panel output requires programming.

⚠ When using the bell output to trigger the SD1+, you may find that the external sounder is partially triggered. If this is the case a 1K resistor will need to be connected between the SD1+ trigger input and +12V.


7. BT. Connections

1. Connect telephone line using one of the methods shown below:
2. Replace the plastic cover over the telephone line connections.

Method 1 - Using the lead supplied

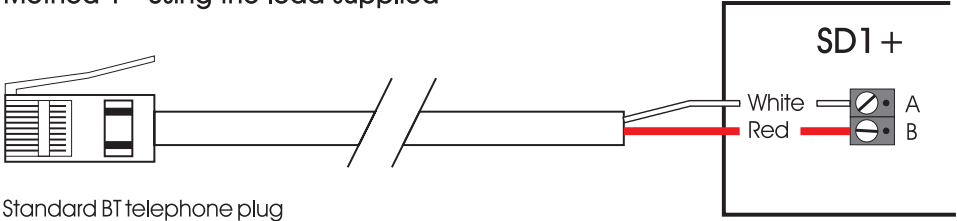

Method 2 - Hard wired connections

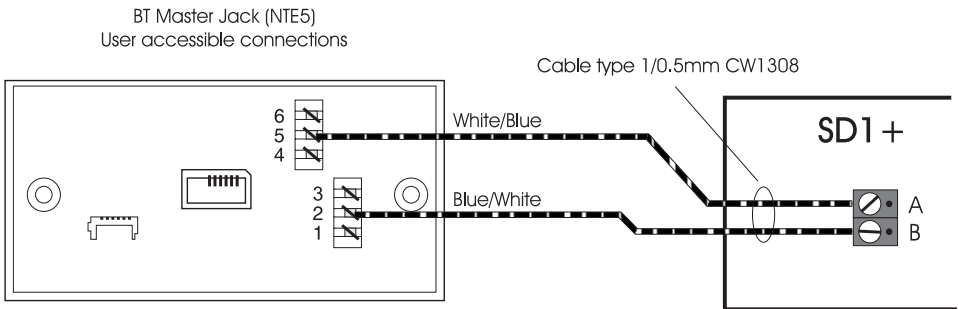

8. Commissioning and Testing

1. If the SD1 + is not being used in the UK please ensure the options switch is set to the appropriate settings, see section 9.
2. Hold the blade of a small screwdriver between the "Factory Restart" pins (JP2) and switch the power back on to the control panel (battery and mains).
3. Remove the screwdriver blade and clip the SD1 + front cover onto the base taking care not to trap any cables.
4. The SD1 + "beeps" every 30 seconds and the display shows: PLEASE RECORD.
5. To select the programming mode enter the default passcode of 1234.
6. The display will show READY. The unit is now ready for programming and testing. Please refer to the "Operating Instructions" for full details.

9. Option Switch Settings

The SD1 + may be fitted with a 4-way option bit switch, this allows the SD1 + to be configured for different countries and for either security or fire mode:

Security mode Operation and features are as per operators/Installation manuals.

Fire Mode In this mode the SD1 + only has one telephone number (1), which also defaults to 999. The number of messages is reduced to one (Message 0). The default acknowledgment option is set to "Clear by No One".

SW1	SW2	SW3	SW4	Mode	Telecommunications
Off	Off	Off	Off	Security	UK & Ireland
On	Off	Off	Off	Security	Belgium
Off	On	Off	Off	Security	Netherlands & Norway
On	On	Off	Off	Security	Not Used
Off	Off	On	Off	Security	Not Used
On	Off	On	Off	Security	Not Used
Off	On	On	Off	Security	TBR21 & Finland
On	On	On	Off	Security	Not Used
Off	Off	Off	On	Fire	UK & Ireland
On	Off	Off	On	Fire	Belgium
Off	On	Off	On	Fire	Netherlands & Norway
On	On	Off	On	Fire	Not Used
Off	Off	On	On	Fire	Not Used
On	Off	On	On	Fire	Not Used
Off	On	On	On	Fire	TBR21 & Finland
On	On	On	On	Fire	Not Used

10. Specifications

Power input:	11.5V - 14V
Current consumption:	35mA (standby); 70mA (Active)
Trigger inputs:	A, B, C,D (+ve or -ve applied, input voltage 5 - 28V)
Phrases A,B,C,D,0:	40 seconds \pm 2 seconds, sampled at 8KHz
Telephone Numbers:	4 x 24 digit telephone numbers
Case dimensions:	150(L) x 104(H) x 30(D) mm
REN value:	0

11. Approval

This product is manufactured to meet all European Economic Area telecommunication networks requirements. The equipment has been approved in accordance with Council Decision 98/482/EC for pan-European single terminal connection to the public switched telephone network (PSTN). However, due to differences between the individual PSTNs provided in different countries, the approval does not, of itself, give an unconditional assurance of successful operation on every PSTN network termination point. In the event of problems you should contact your equipment supplier in the first instance.

DECLARATION OF CONFORMANCE

Cooper Security Ltd issues this certificate to certify that the equipment known as:

TSD1+

Complies with the following directive:

1995/5/EC R&TTE Directive

Signed



Dr GP Davidson, Technical Director

Date: 13/06/00

12. Troubleshooting Guide

Problem *The unit will not dial out.*

Cause Number incorrectly dialled

Action Check the telephone number you are calling has been entered correctly.

Cause If the SD1+ is connected to a PABX system you may require a pause after dialling the first digit.

Action Program a pause in the telephone number (see "Operating Instructions"). If this does not solve the problem the SD1+ must be connected to a direct telephone line.

Cause Incorrect telephone line connections.

Action Check the connections to the telephone line (see section 7).

Problem *When the unit calls the recipient they can't acknowledge the unit by pressing the number [8] button.*

Cause Incorrect acknowledgement procedure.

Action Instruct the recipient in the correct procedure (see Operating Instructions).

Cause Incorrectly connected to the telephone socket.

Action Check that all three connections are correctly connected (see section 7).

Cause Incompatible telephone.

Action Call the recipient and ask them to press the number [8] button on their telephone for 1 second. If you hear anything other than a 1 second tone, their telephone is not capable of acknowledging the SD1+.

Problem *The recipient can't acknowledge the unit with a mobile telephone.*

Cause Weak reception or incompatible telephone.

Action Mobile telephones will only work correctly if they are used in an area where the reception is good.

Problem *The SD1+ will not trigger from the alarm panel.*

Cause Incorrect polarity setting.

Action Check the jumper-link is set to the correct position (see section 5).

Cause Incorrect trigger voltage.

Action Measure trigger voltage and check connections (see section 6).



Cooper Security Ltd.
Security House, Xerox Business Park,
Mitcheldean, Gloucestershire,
GL17 0SZ. England



Product Support Tel: +44 (0)1594 545556
Between 09:00 and 17:00, Monday to Friday.
Product Support Fax: +44 (0)1594 545401.
www.coopersecurity.co.uk

